

BMW Inspection I

VIN: JC33730

Model: M 3

Body / electrical system

- Battery: check acid level and charge state (high-current test), top up with distilled water if necessary.
- Check lighting system.
- Check instrument and indication field lighting.
- Check horn, headlight flasher and hazard warning lights.
- Windscreen wash/wipe system: check wiper blades and spray nozzle adjustment.
- Seat belts: check condition and function.
- Locks: check condition and function, oil or grease if necessary.
- Heater/air conditioner: change microfilter/carbon canister. (In event of large collection of dust, reduce intervals between changes accordingly.) ^{1*}
- Check entire body - except cavities - for corrosion (no later than after 2 years).

Engine compartment

- Reset service interval indicator as per factory specification.
- Fault memory search.
- Replace spark plugs.
- Check valve clearance, adjust if necessary.
- Coolant hoses: visually inspect for leaks. Check coolant level and concentration, top up if necessary.
- Important: change coolant no later than every 2 years (fill quantity as required). ¹
- Power steering/ride height control: visually inspect for leaks, check fluid level, top up if necessary.
- Brake and clutch hydraulics: check fluid level, top up if necessary.
- Important: change brake fluid as per SIA, no later than after 2 years. If necessary, activate service interval indicator. ¹
- Fluid level and antifreeze additive of windscreen washer and intensive cleaning systems: check, top up if necessary.

Chassis area

- Change engine oil and oil filter. **(7 I)**
- Transmissions/gearboxes (all): visually inspect for leaks
- Fuel lines, fuel tank and fuel hoses: visually inspect routing, condition and for leaks.
- Exhaust system: check condition, routing, mounting and for leaks.
- Check steering for clearance. Check condition of tie rod and front axle joints, steering gear, steering linkage, sleeves and flexible disc.

- Remove and install disc brake pads at front and if necessary at rear, check total thickness. Replace pads if necessary. Check surface condition of brake discs. Grease wheel centring mount on alloy disc wheels.
- Brake system: check connections and lines for leaks, damage and correct position. Clean brake linings and drums for foot brake and check for wear. Check wheel brake cylinders and dust sleeves for leaks.
- Check handbrake lever travel, adjust as per adjusting instruction if necessary.
- Tyres
 - Check inflation pressures, correct if necessary (spare wheel as well!). Check external condition (left/right), tread depth and tread pattern.
 - In event of uneven wear, carry out wheel alignment and correct after consultation with customer. ¹

Final inspection

- Check for roadworthiness:
 - Brakes (rear disc brakes: brake in handbrake)
 - Steering/power steering
 - Clutch
 - Springs and shock absorbers (visual inspection)
 - Rearview mirror
 - Heater blower
 - Telltale and warning lights in instrument cluster
 - Check Control messages

1 for a separate charge

1* for a separate charge except for vehicles with standard equipment specification