

MINI Oil Service

Lead type: RC31

Model: MINI COOPER

Body / electrical system

- Heater/air conditioner: change microfilter.

Engine compartment

- Change engine oil and oil filter. **(4,5 l)**
- Reset service interval indicator as per factory specification.

Chassis area

- Brake pads
 - If changing pads: clean brake pad take-ups. Brake discs: check surface and thickness. Grease wheel centring mount on alloy wheels. ¹
 - Check pad thickness with measuring gauge.
- Parking brake
 - Check function, adjusting if necessary
 - Repair as per instructions ¹

1 for a separate charge