

BMW Requirements-based Service

VIN: PW59940

Model: 335d M57(T2)TOP

[] Standard scopes

- Check Check Control messages
- Check telltale and warning lights

[] Engine oil

- Change engine oil and oil filter. **(7,5 l)**
- Handbrake
 - Check function
- With every 3rd engine oil change
 - Intake silencer: replace air filter element. In event of large collection of dust, reduce intervals between changes accordingly. ¹
- With every 3rd engine oil change
 - Replace fuel filter. (In event of poor diesel fuel quality, reduce intervals between changes if necessary.) ¹
- Reset according to factory specification

[] Front brakes

- Change brake pads, clean brake pad take-ups
- Brake discs
 - Check surface and thickness
 - If necessary: replace ¹
- Reset according to factory specification

[] Rear brakes

- Change brake pads, clean brake pad take-ups
- Brake discs
 - Check surface and thickness
 - If necessary: replace ¹
- Handbrake
 - Check condition, brake lining thickness and function
 - If necessary: replace ¹
- Reset according to factory specification

[] Microfilter

- Heating, A/C or automatic A/C: replace microfilter.
- Reset according to factory specification

[] Brake fluid

- Change brake fluid
- Reset according to factory specification

[] Vehicle check

- Diagnosis brief test
- Check horn, headlight flasher and hazard warning lights.
- Check instrument and indication field lighting, check heater blower.
- Check lighting system.
- Seat belts: check condition of belt strap, function of inertia reel mechanism, locking reel, belt buckle.
- Check windscreen wash/wipe system
- Body: check for corrosion (except cavities)
- Tyres: check tread depth, tread pattern, external condition, check inflation pressure + correct if necessary.
- Initialise Run Flat Indicator
- Battery
 - Check battery
 - If necessary: recharge battery. ¹
- Steering fluid reservoir: check fluid level
- Check coolant level and concentration, top up if necessary. ¹
- Wipers for windscreen and headlights
 - Check fluid level, top up if necessary
- Brake lines and connections: check for leaks, damage and correct position
- Underbody incl. all visible parts: check for damage, leaks and corrosion.
- Steering components: check for clearance, leaks, damage and wear.
- Check for roadworthiness (test drive)
 - Brakes
 - Steering
 - Shock absorbers
 - Clutch
- Reset according to factory specification

[] Particulate filter (optional)

- Replace particulate filter
- Reset CBS display as per factory specification.

1 for a separate charge